

Work Order ID 144848

April 26, 2016 10:43:27 AM

144848

Page 1

Item ID: D350-591-312 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible
 Start Date: 5/6/2016 Start Qty: 10.00 ***10*** Cust Item ID:
 Required Date: 5/31/2016 Req'd Qty: 10.00 ***10*** Customer:
 Reference:

Approvals: Process Plan: SJA Date: **20160426** Tooling: Date: Run Start ***NR1***
 QC: Date: SPC (Y/N): Date: Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
100	Document Control DOCUMENT CONTROL	0.00	DAS 8 9-89					MW 16-05-16	
100									
DC	Memo	0.00						MAY 24 2016	(10)
Doc.Control -USB or Paperwork	Photocopy bluefile and type labels as per PPP D350-591-312 CHG001								
110	Large Fab	0.00							
110									
Large Fab	Memo	4.00							
Large Fab	1-Bevel end for welding FWD ONLY								
	2-Weld Support using Jig DT10115, weld Fwd End Plate as per QSI 004 & Dwg D3272								
	A/R Aluminum Rod <u>M231562 / M134442</u>								
	3-Grind End Plate flush <u>16-5-10</u>								

B144848

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																						
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																						
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																						
Large Fab ☐	Composite ☐	Supplier ☐																							
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																		
Description Work Order Deviation				Disposition			Completed By																		
							Lead hand / Supervisor Approval Verification																		
							QC / QA Coordinator Approval																		
Root Cause		FAULT CATEGORY																							
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐	OTHER : ☐																			

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width:100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>				Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																		
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																		
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																		
Large Fab ☐	Composite ☐	Supplier ☐																			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval																	
Description Work Order Deviation		Disposition		Completed By																	
				Lead hand / Supervisor Approval Verification																	
				QC / QA Coordinator Approval																	
<table style="width:100%; border: none;"> <tr> <td style="width:25%; text-align: center; vertical-align: top;"> Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ </td> <td style="width:25%; text-align: center; vertical-align: top;"> ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due </td> <td style="width:25%; text-align: center; vertical-align: top;"> ☐ Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter </td> <td style="width:25%; text-align: center; vertical-align: top;"> FAULT CATEGORY ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes </td> <td style="width:25%; text-align: center; vertical-align: top;"> ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center </td> <td style="width:25%; text-align: center; vertical-align: top;"> ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence </td> </tr> <tr> <td colspan="4" style="vertical-align: top;">OTHER : ☐</td> </tr> </table>					Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due	☐ Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter	FAULT CATEGORY ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes	☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center	☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence	OTHER : ☐										
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due	☐ Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter	FAULT CATEGORY ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes	☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center	☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence																
OTHER : ☐																					

Work Order ID 144848

April 26, 2016 10:43:27 AM

144848

Page 3

Item ID: D350-591-312 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible
 Start Date: 5/6/2016 Start Qty: 10.00 ***10*** Cust Item ID:
 Required Date: 5/31/2016 Req'd Qty: 10.00 ***10*** Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
150	QC7-Inspect Chemical Conversion Coat	0.00							
150									
QC	Memo	0.10							
Quality Control									

180		0.00							
180									
Large Fab	Memo	4.00							
Large Fab	1-Assemble Leg Assembly as per Dwg D3272.								
	2-Leave one rivet out until welding is complete.								
	3-Bevel Aft end for welding								
	4-Inspect for foreign object as per QSI 024								
	5-Weld Aft End Plate as per QSI 004 & Dwg D3272								
	A/RAluminum Rod <u>M 131562</u>								
	6-Grind End Plate flush								
	7-Install last rivet as per Dwg.								

16-5-12

BE 16-05-12

16-5-12

DAS
03
9-89

10

16-5-10

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																						
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																						
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																						
Large Fab ☐	Composite ☐	Supplier ☐																							
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																		
Description Work Order Deviation				Disposition				Completed By																	
								Lead hand / Supervisor Approval Verification																	
								QC / QA Coordinator Approval																	
Root Cause		FAULT CATEGORY																							
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐		Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐		Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐		Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐																	
OTHER : ☐																									

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
OTHER :									

Work Order ID 144848

April 26, 2016 10:43:27 AM

144848

Page 5

Item ID: D350-591-312 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible
Start Date: 5/6/2016 Start Qty: 10.00 ***10*** Cust Item ID:
Required Date: 5/31/2016 Req'd Qty: 10.00 ***10*** Customer:
Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
220 *220* Powdercoat Powder Coating	White Gloss(Ref:4.3.5.1) per QSI005 4.3-Alum <i>M 134631</i> Memo START TIME: <i>1:15.</i> OVEN TEMPERATURE: <i>320°</i> FINISH TIME: <i>1:45.</i>	0.00 2.10				<i>10</i>	<i>0</i>	<i>1600-18.</i>	<i>233</i>
230 *230* HandFinish Hand Finishing	Wing Walk as per dwg QSI005 4.4 Batch <i>M1134 4.08</i> Memo	2.20						<i>x 1012H d ill 16105/18</i>	
240 *240* QC Quality Control	QC3- Inspect Part Finish Memo	0.00 0.10				<i>(10)</i>		<i>DAS 38 9-89</i>	<i>MAY 20 2016</i>

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
		OTHER : ☐							

Work Order ID 144848

April 26, 2016 10:43:27 AM

144848

Page 6

Item ID: D350-591-312

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 5/6/2016 Start Qty: 10.00

10

Cust Item ID:

Required Date: 5/31/2016 Req'd Qty: 10.00

10

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

250

Pick Kit

0.00

250

Packaging

Memo

0.10

Packaging

10
DAS 27
9-89
MAY 14 2016

260

QC4- 100% Inspect kits for completeness

0.00

260

QC

Memo

0.30

Quality Control

10X
DAS 28
9-89
MAY 24 2016

270

Packaging

0.00

270

Packaging

Memo

0.00

Packaging

Identify and pack for shipping as per PPPD350-591-312
Location :FG072

SOLD

10X
DAS 27
9-89
MAY 26 2016

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width:100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐																																															
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																																																																				
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																																																																				
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																																																																				
Large Fab ☐	Composite ☐	Supplier ☐																																																																					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																																																																
Description Work Order Deviation				Disposition			Completed By																																																																
							Lead hand / Supervisor Approval Verification																																																																
							QC / QA Coordinator Approval																																																																
Root Cause <table style="width:100%; border: none;"> <tr><td style="border: none;">Environment ☐</td><td style="border: none;">No Re-verification ☐</td></tr> <tr><td style="border: none;">Design ☐</td><td style="border: none;">Operator ☐</td></tr> <tr><td style="border: none;">Doc/Data ☐</td><td style="border: none;">Offset/Setup ☐</td></tr> <tr><td style="border: none;">Equip/Tooling ☐</td><td style="border: none;">Supplier ☐</td></tr> <tr><td style="border: none;">Handling/Pre ☐</td><td style="border: none;">Training ☐</td></tr> <tr><td style="border: none;">Material ☐</td><td style="border: none;">Use for Testing ☐</td></tr> <tr><td style="border: none;">Internal Transport ☐</td><td style="border: none;">Poor Information ☐</td></tr> <tr><td style="border: none;">Tribal Knowledge ☐</td><td style="border: none;">Rushing ☐</td></tr> <tr><td style="border: none;">LOA ☐</td><td style="border: none;">Product Improvement ☐</td></tr> <tr><td style="border: none;">Substation ☐</td><td style="border: none;">Process Improvement ☐</td></tr> <tr><td style="border: none;">Past Expiry Date ☐</td><td style="border: none;">Manufacturing Process ☐</td></tr> <tr><td style="border: none;">Misidentified ☐</td><td style="border: none;">Past Due ☐</td></tr> </table>		Environment ☐	No Re-verification ☐	Design ☐	Operator ☐	Doc/Data ☐	Offset/Setup ☐	Equip/Tooling ☐	Supplier ☐	Handling/Pre ☐	Training ☐	Material ☐	Use for Testing ☐	Internal Transport ☐	Poor Information ☐	Tribal Knowledge ☐	Rushing ☐	LOA ☐	Product Improvement ☐	Substation ☐	Process Improvement ☐	Past Expiry Date ☐	Manufacturing Process ☐	Misidentified ☐	Past Due ☐	FAULT CATEGORY <table style="width:100%; border: none;"> <tr> <td style="border: none;">Pressure/Forced ☐</td> <td style="border: none;">Temperature/Cure ☐</td> <td style="border: none;">Power Loss/Surge ☐</td> <td style="border: none;">Positioned Wrong ☐</td> </tr> <tr> <td style="border: none;">Bending ☐</td> <td style="border: none;">Set-up ☐</td> <td style="border: none;">Folio/Program ☐</td> <td style="border: none;">Outside Dimensions ☐</td> </tr> <tr> <td style="border: none;">Centre Not Concentric ☐</td> <td style="border: none;">BOM/Route ☐</td> <td style="border: none;">Grain ☐</td> <td style="border: none;">Over/Under tolerance ☐</td> </tr> <tr> <td style="border: none;">Cracks ☐</td> <td style="border: none;">Broken/Damage/Defect ☐</td> <td style="border: none;">Weld ☐</td> <td style="border: none;">Part Incorrect ☐</td> </tr> <tr> <td style="border: none;">Crimp/Kink/Ripple/Wave ☐</td> <td style="border: none;">Inspection Incomplete/Unqualified ☐</td> <td style="border: none;">Wrong Stock Pulled ☐</td> <td style="border: none;">Part Lost/Missing ☐</td> </tr> <tr> <td style="border: none;">Cuffs ☐</td> <td style="border: none;">Contamination ☐</td> <td style="border: none;">Out of Sequence ☐</td> <td style="border: none;">Part Moved ☐</td> </tr> <tr> <td style="border: none;">Crushing ☐</td> <td style="border: none;">Countersink ☐</td> <td style="border: none;">Off-set ☐</td> <td style="border: none;">Drawing ☐</td> </tr> <tr> <td style="border: none;">Heat Treat ☐</td> <td style="border: none;">Cut Too Short ☐</td> <td style="border: none;">Mislabeled ☐</td> <td style="border: none;">Finish ☐</td> </tr> <tr> <td style="border: none;">Wave/Twist in Tube ☐</td> <td style="border: none;">Instructions Incomplete/Unclear ☐</td> <td style="border: none;">Fit/Function ☐</td> <td style="border: none;">Misread ☐</td> </tr> <tr> <td style="border: none;">Marks/Chatter ☐</td> <td style="border: none;">Drill Holes ☐</td> <td style="border: none;">Misaligned/off center ☐</td> <td style="border: none;">Turning Sequence ☐</td> </tr> </table>						Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐
Environment ☐	No Re-verification ☐																																																																						
Design ☐	Operator ☐																																																																						
Doc/Data ☐	Offset/Setup ☐																																																																						
Equip/Tooling ☐	Supplier ☐																																																																						
Handling/Pre ☐	Training ☐																																																																						
Material ☐	Use for Testing ☐																																																																						
Internal Transport ☐	Poor Information ☐																																																																						
Tribal Knowledge ☐	Rushing ☐																																																																						
LOA ☐	Product Improvement ☐																																																																						
Substation ☐	Process Improvement ☐																																																																						
Past Expiry Date ☐	Manufacturing Process ☐																																																																						
Misidentified ☐	Past Due ☐																																																																						
Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐																																																																				
Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐																																																																				
Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐																																																																				
Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐																																																																				
Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐																																																																				
Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐																																																																				
Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐																																																																				
Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐																																																																				
Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐																																																																				
Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐																																																																				
OTHER :																																																																							

Work Order ID 144848

April 26, 2016 10:43:27 AM

144848

Page 7

Item ID: D350-591-312

Accept

N900040100Setup Start ***NS1***

Revision ID:

Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Stop ***NS2***Start Date: 5/6/2016 Start Qty: 10.00 ***10***

Cust Item ID:

Required Date: 5/31/2016 Req'd Qty: 10.00 ***10***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run Hours

Tool ID

Tool #

Plan
CodeAccept
QtyReject
QtyReject
NumberInsp.
Stamp

280

QC21- Final Inspection - Work Order Release

0.00

280

QC

Memo

1.00

Quality Control

MCS

MAY 26 2016

MCS

MAY 26 2016

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____			
Misidentified ☐	Past Due ☐				

April 26, 2016 10:43:32 AM

1 44848

D350-591-312

Start Date: 5/6/2016**Required Date:** 5/31/2016**Start Qty: 10.00**

Required Qty: 10.00

IPP Rev:A04.03.22New issue KJ/RF

IPP Rev:B 07-06-09 Added D3572-1 JLM

IPP Rev:C 08-04-02 ECN1163 DD verified by:EC

IPP Rev:D 08-04-08 ECN1164 DD verified by:eC IPP Rev:D

fixe route seq in bom DD 10.04.28 verified by:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D3272-1		Manufactured	No			110	Each	2.0000	1	10			
D3272-1 Step													
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				WA003		2							
				140462		2							
D3067-1		Manufactured	No			110	Each	77.0000	1	10			
D3067-1 End Plate													
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				WA003		77							
				142780		77							
D3219-1		Manufactured	No			110	Each	120.0000	2	20			
D3219-1 Plate													
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				WA003		120							
				142668		40							
				144410		80							

Picklist Print

Page 2

April 26, 2016 10:43:32 AM

Work Order ID: 144848

144848

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 5/6/2016

Required Date: 5/31/2016

Start Qty: 10.00

Required Qty: 10.00

D3066-1 Manufactured No 180 Each 32.0000 2 20

D3066-1

Spacer

**

16-5-17 JK

Location Loc Qty Loc Code

WA003 32

142788

32

20

MS20600-AD4W4 Purchased No

180 Each 1,604.000 16 160

MS20600-AD4W4

Rivets

**

16-5-12

Location Loc Qty Loc Code

CCK005 1482

M133990

1482

ST308 122

M132640

122

151 + 10

D3065-041 Manufactured No

180 Each 11.0000 1 10

D3065-041

Step Leg Assembly

**

16-5-11 JK

Location Loc Qty Loc Code

WA002 11

144118

11

10

D3067-1 Manufactured No

180 Each 77.0000 1 10

D3067-1

End Plate

**

BE 16-05-12

Location Loc Qty Loc Code

WA003 77

142780

77

10

Picklist Print

April 26, 2016 10:43:32 AM

Page 3

Work Order ID: 144848

144848

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 5/6/2016

Required Date: 5/31/2016

Start Qty: 10.00

Required Qty: 10.00

AN3-35A

Purchased

No

250

Each

199.0000

2

20

AN3-35A

Bolt

**

DAS
28
9-89

Location

Loc Qty

Loc Code

FG

10

122800

10

ST348

189

m134167

50

m134497

139

20

D3235-1

Manufactured

No

250

Each

102.0000

2

20

D3235-1

Mounting Lug

**

DAS
28
9-89

Location

Loc Qty

Loc Code

ST521

2

141693

2

ST546A

100

143809

100

20

D3278-041

Manufactured

No

250

Each

24.0000

1

10

D3278-041

Support Assembly

**

DAS
28
9-89

Location

Loc Qty

Loc Code

ST522

24

140959

4

142673

20

10

DAS
28
9-89

DAS
27
9-89

MAY 14 2016

Picklist Print

April 26, 2016 10:43:32 AM

Page 4

Work Order ID: 144848

144848

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 5/6/2016

Required Date: 5/31/2016

Start Qty: 10.00

Required Qty: 10.00

NAS1149D0463J

Purchased

No

250

Each

3,166.000

16

160

NAS1149D0463.J

WASHER

Location

Loc Qty

Loc Code

GA	328	
M132035	21	
M134508	307	
ST260a	1600	
M134508	600	
M134634	1000	
ST263	250	
M134039	29	
M134573	221	
ST269	988	
M132317	100	
M132677	888	

160

DAS
28
9-89

DAS
6
27
9-89

NAS1149D0563J

Purchased

No

250

Each

1,398.000

4

40

NAS1149D0563.J

Washer

Location

Loc Qty

Loc Code

GA	261	
m125807	2	
m133769	259	
ST263	1038	
m134257	38	
m134497	1000	
ST269	99	
m128257	99	

40

DAS
28
9-89

DAS
6
27
9-89

MAY 14 2016

April 26, 2016 10:43:33 AM

Shop Packet Print

Page 4

Picklist Print

April 26, 2016 10:43:33 AM

Page 5

Work Order ID: 144848

144848

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 5/6/2016

Required Date: 5/31/2016

Start Qty: 10.00

Required Qty: 10.00

AN5-36A Purchased No 250 Each 89.0000 2 20

AN5-36A

Bolt

DAS
28
9-89

Location	Loc Qty	Loc Code
over004	40	
M134509	40	
ST336	49	
M130466	15	
M134502	34	

**

DAS
27
9-89

D2618 Manufactured No 250 Each 19.0000 2 20

D2618

Bushing

DAS
28
9-89

Location	Loc Qty	Loc Code
ST008A	19	
141571	19	

**

DAS
27
9-89

D2230-3 Manufactured No 250 Each 101.0000 4 40

D2230-3

Mounting Lug

DAS
28
9-89

Location	Loc Qty	Loc Code
FG	8	
109344	4	
89045	4	
ST521	93	
141406	93	

**

142522X30

DAS
27
9-89

MAY 14 2016

Picklist Print

April 26, 2016 10:43:33 AM

Page 6

Work Order ID: 144848

144848

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 5/6/2016

Required Date: 5/31/2016

Start Qty: 10.00

Required Qty: 10.00

D2856-400

Manufactured No

250

f

238.8947

1.2

12

D2856-400

Abrasion Strip 4" Wide (Per Foot)

DAS
28
9-89

Location

Loc Qty

Loc Code

ST418

238.8947416

134509

22.8947416

141123

216

12

DAS
6
9-89

DAS
27
9-89

cut (2) D2856-400-720 as per dwg

MS21042L3

Purchased

No

250

Each

2,101.000

2

20

MS21042L3

Nut

Location

Loc Qty

Loc Code

FP001

100

m133790

100

GA

761

m133790

3

m134360

758

ST303

1240

m134039

12

m134360

628

m134634

600

20

DAS
6
9-89

MAY 14 2016

DAS
28
9-89

Picklist Print

April 26, 2016 10:43:33 AM

Page 7

Work Order ID: 144848

144848

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 5/6/2016

Required Date: 5/31/2016

Start Qty: 10.00

Required Qty: 10.00

AN4-13A

Purchased

No

250

Each

482.0000

8

80

AN4-13A

Bolt

**

~~737473775~~
134634x75

DAS

6

9-89

DAS

27

9-89

Location

Loc Qty

Loc Code

FG

20

122808

20

GA

36

m134167

36

over003

300

m134634

300

ST344

126

m134260

9

m134497

117

MS21042L5

Purchased

No

250

Each

451.0000

2

20

MS21042L5

Nut

**

DAS

6

9-89

DAS

27

9-89

Location

Loc Qty

Loc Code

GA

115

m127813

115

OVER007

100

m134509

100

ST303

236

m134055

11

m134567

225

DAS
28
9-89

20

MAY 14 2016

Picklist Print

April 26, 2016 10:43:33 AM

Page 8

Work Order ID: 144848

144848

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 5/6/2016

Required Date: 5/31/2016

Start Qty: 10.00

Required Qty: 10.00

MS21042L4

Purchased

No

250

Each

1,642.000

8

80

MS21042L4

Locknut

DAS

6

9-89

DAS

27

9-89

DAS
28
9-89

Location

Loc Qty

Loc Code

GA

283

m133769

283

ST303

1262

m134055

1

m134509

261

m134606

1000

ST305

97

m130922

97

NAS1149D0363J

Purchased

No

250

Each

1,518.000

4

40

NAS1149D0363J

Washer

DAS

27

9-89

DAS

6

9-89

MAY 14 2016

DAS
28
9-89

Location

Loc Qty

Loc Code

GA

518

m134055

518

ST263

1000

m134370

19

m134606

981

April 26, 2016 10:43:33 AM

Shop Packet Print

Page 8



DESIGN <i>qp</i>	DRAWN BY <i>[Signature]</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3272	REV. B SHEET 1 OF 3
DATE 07.05.18		TITLE STEP ASSEMBLY, HI LONG SCALE NTS	
A	04.03.01	NEW ISSUE	
B	07.05.18	D3272-1 WAS D2622-120	

RELEASED

07.06.04 *[Signature]*

QTY -041	QTY -042	PART NUMBER	DESCRIPTION
X		D3272-041	STEP ASSEMBLY, HIGH LONG (LH)
	X	D3272-042	STEP ASSEMBLY, HIGH LONG (RH)
1	1	D3065-041	LEG ASSEMBLY
2	2	D3066-1	SPACER
2	2	D3067-1	END PLATE
2	2	D3219-1	SUPPORT
1	1	D3272-1	STEP
16	16	MS20600AD4W4	RIVET

GENERAL NOTES:

- 1) D3272-041 SHOWN. FOR D3272-042, INSTALL D3219-1 SUPPORT OPPOSITE SIDE
- 2) WELD PER DART QSI 004
- 3) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005.4.1
POWDER COAT ASSEMBLY WHITE (4.3.5.1) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 5) ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
- 6) BREAK ALL SHARP EDGES 0.005 TO 0.010 MAX.

20160426


SH 144848

Copyright © 2004 by DART AEROSPACE LTD


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DESIGN	40	DRAWN BY	JB	DART AEROSPACE LTD
CHECKED	CE	APPROVED	JB	HAWKESBURY, ONTARIO, CANADA
DATE	07.05.18	TITLE	STEP ASSEMBLY, HI LONG	REV. B
				SHEET 2 of 3
				SCALE 1:20

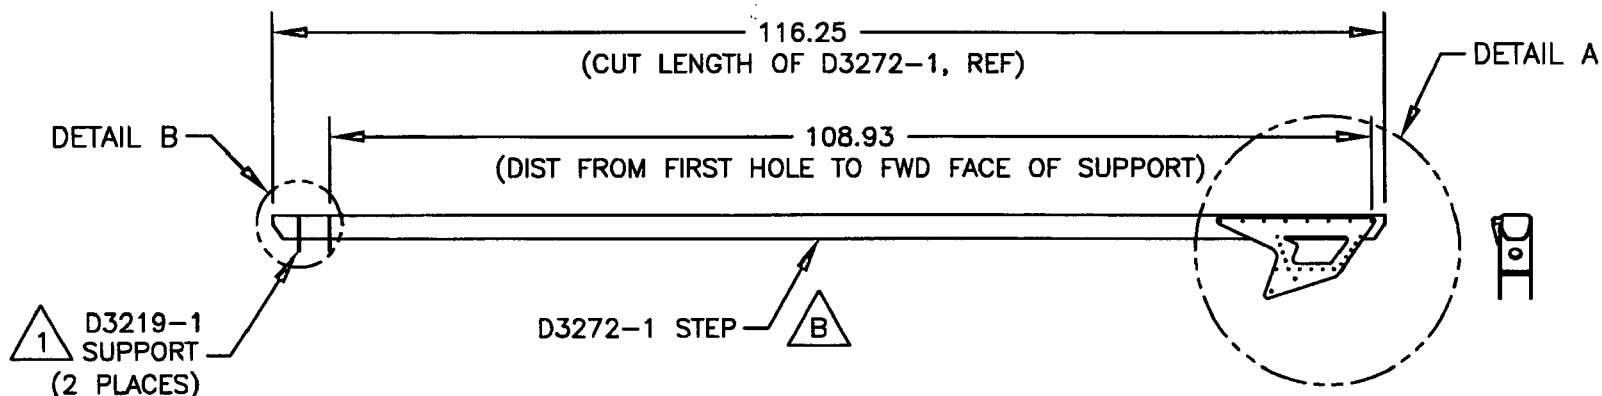

D3272-041 STEP ASSEMBLY (LH. SHOWN)
D3272-042 STEP ASSEMBLY (RH, OPPOSITE)

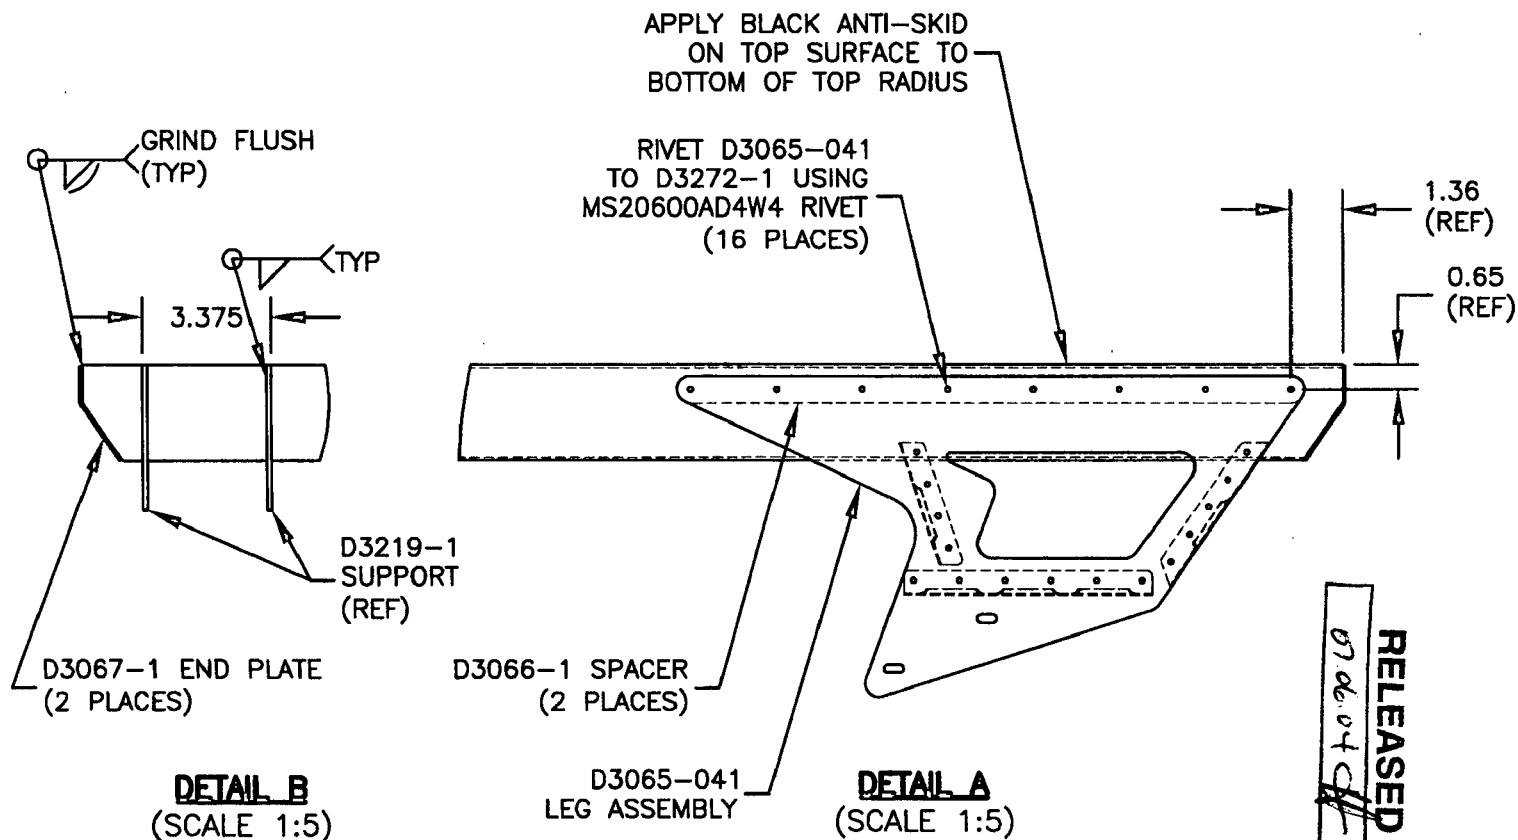




DESIGN <i>CP</i>	DRAWN BY <i>[Signature]</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>CE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3272	REV. B SHEET 3 OF 3
DATE 07.05.18		TITLE STEP ASSEMBLY, HI LONG	SCALE 1:20

RELEASED


07.06.04 *[Signature]*

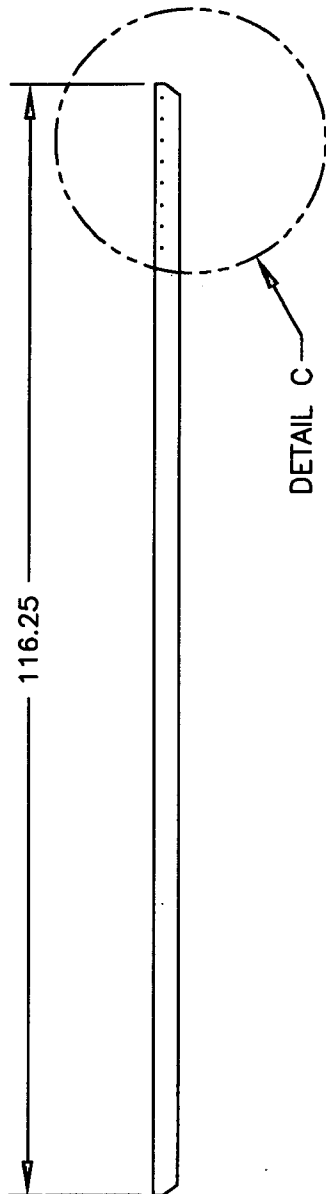

DETAIL C

B D3272-1 STEP

(MAKE FROM D2622-120 STEP EXTRUSION)

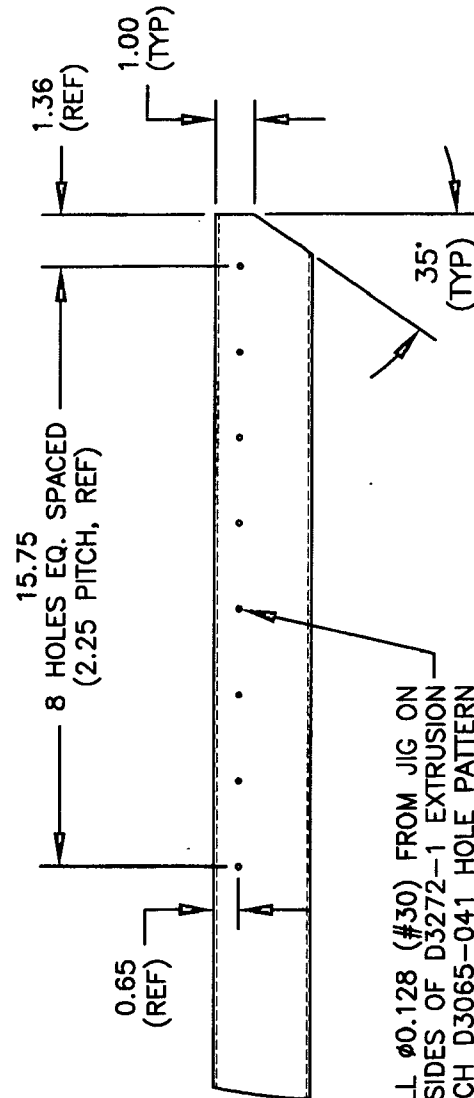

DRILL $\phi 0.128$ (#30) FROM JIG ON BOTH SIDES OF D3272-1 EXTRUSION TO MATCH D3065-041 HOLE PATTERN

DETAIL C
(SCALE 1:5)

Copyright © 2004 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

Qty -213	Qty -214	Qty -215	Qty -216	Qty -311	Qty -312	Part Number	Description
X						D350-591-213	<i>Heli-Access-Step™</i> , Short Step – High Skid, LH
	X					D350-591-214	<i>Heli-Access-Step™</i> , Short Step – High Skid, RH
		X				D350-591-215	<i>Heli-Access-Step™</i> , Short Step – Low Skid, LH
			X			D350-591-216	<i>Heli-Access-Step™</i> , Short Step – Low Skid, RH
				X		D350-591-311	<i>Heli-Access-Step™</i> , Long Step – High Skid, LH
					X	D350-591-312	<i>Heli-Access-Step™</i> , Long Step – High Skid, RH
1						D3078-041	STEP ASSEMBLY (HIGH-SHORT, LH)
	1					D3078-042	STEP ASSEMBLY (HIGH-SHORT, RH)
		1				D3168-041	STEP ASSEMBLY (LOW-SHORT, LH)
			1			D3168-042	STEP ASSEMBLY (LOW-SHORT, RH)
				1		D3272-041	STEP ASSEMBLY (HIGH-LONG, LH)
					1	D3272-042	STEP ASSEMBLY (HIGH-LONG, RH)
2	2	2	2	4	4	D2230-3	MOUNTING LUG
2	2	2	2	2	2	D2618	BUSHING
4	4	4	4			D2732-030	CUSHION
				2	2	D2856-400-720	ABRASION STRIP
2	2	2	2	2	2	D3235-1	MOUNTING LUG
				1	1	D3278-041	SUPPORT ASSEMBLY
2	2	2	2	2	2	AN3-35A	BOLT
				8	8	AN4-13A	BOLT
4	4	4	4			AN4-15A	BOLT
2	2	2	2	2	2	AN5-36A	BOLT
4	4	4	4	4	4	NAS1149D0363J	WASHER (AN960JD10)
12	12	12	12	16	16	NAS1149D0463J	WASHER (AN960JD416)
4	4	4	4	4	4	NAS1149D0563J	WASHER (AN960JD516)
2	2	2	2	2	2	MS21042L3	NUT
6	6	6	6	8	8	MS21042L4	NUT
2	2	2	2	2	2	MS21042L5	NUT
				1	1	*DSI 9410-011	STEP MODIFICATION KIT

*DSI 9410-011 Step Modification Kits are provided with all D350-591-311 and D350-591-312 Steps. This kit is provided as an option for the installer and is therefore **NOT REQUIRED** to complete the installation of the D350-591-311 or D350-591-312 Steps. Refer to Figure 21 for installation of the DSI 9410-011 Kit.